



Dear Valued Customer,

Thank you for purchasing our Digisound MP3/MP4 Player. Please follow the safety tips below to ensure smooth operation for your Digisound player. We hope you enjoy the high quality sound of this player for a long time to come.

MP3 and MP4 Safety Tips:

- ❖ Press 'Play' button for 3 secs to turn On/Off player.
- ❖ Do not format using FAT32 from Windows (it will corrupt the player).
- ❖ Check your USB charger if you cannot charge your MP3 or MP4 player. Protect your USB charger from lightning or power surge with an automatic voltage regulator (AVR).
- ❖ Never charge more than 3 hours each time. Do NOT overcharge!
- ❖ Push button to OFF when not using to save battery.
- ❖ Do not place in jeans, or any tight pants/pockets to prevent screen breakage.
- ❖ Do not drop or press hard the buttons and glass screen.
- ❖ Do not select 'F/W Upgrade' in the 'Setting' mode (player will hang).
- ❖ Our one year warranty does not include earphone, cables, power adapter, CD, screen breakage, battery failure due to prolong charging, any defects due to contact with liquid, virus attacks and wrong formatting.